




# Removing the Logitech MBJ58 Mouse Scroll Wheel

This is a prerequisite for replacing the support and resistance springs and the scroll wheel.

Written By: Conor Whatley

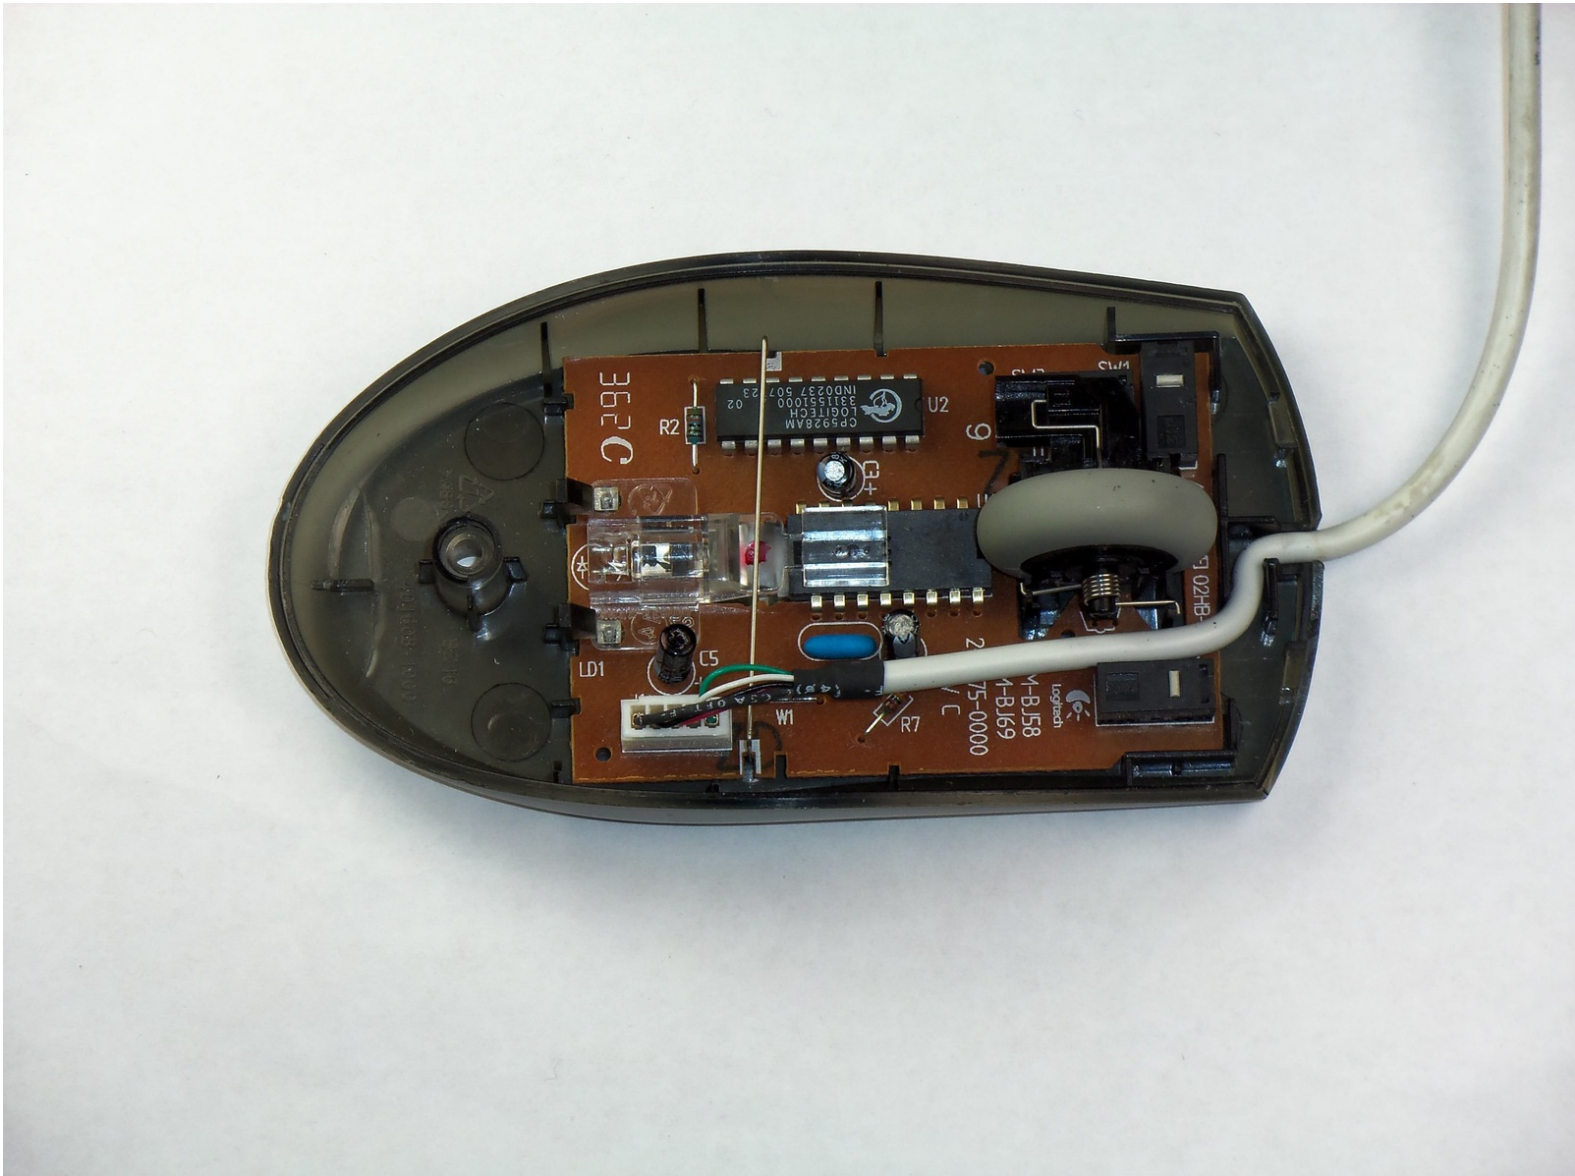

## INTRODUCTION

After removing the cover, removing the scroll wheel will allow access to the springs and the wheel itself.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top cover






- Hold the mouse in your hand so that the bottom side is facing upward.
- Locate the #1 screw towards the bottom half of the mouse.
- Take the 4.76 mm Phillips screwdriver and unscrew the #1 screw that was previously located.

## Step 2



- Place the mouse back on the hard surface, with the bottom side touching the hard surface.
- Gently, lift up the top cover of the mouse and remove.

## Step 3 — Scroll Wheel

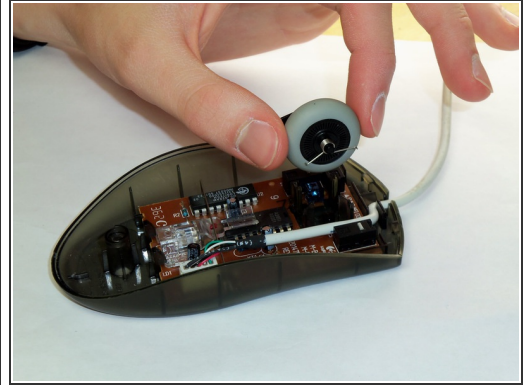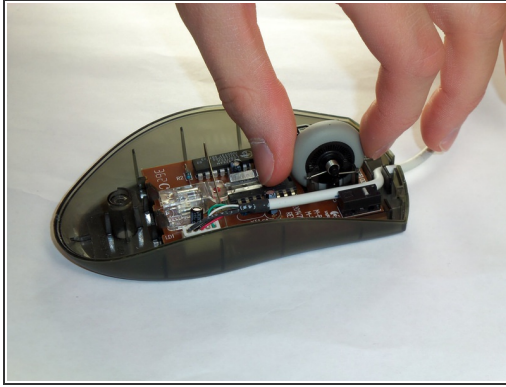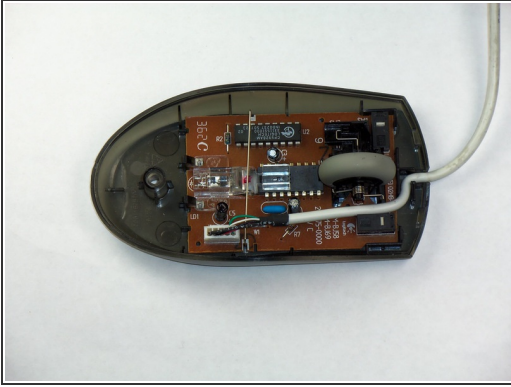

- Locate the scroll wheel on the mouse.
- Grab the scroll wheel with your thumb and index finger.
- Gently lift up to remove the scroll wheel from the mouse.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 12:42:37 PM.